


Fuel Filter: Service and Repair


REMOVAL (INCLUDING FUEL FILTER AND FUEL PRESSURE REGULATOR)

1. Preparation

- (1) Remove the rear seat cushion/
(2) Remove the service cover (A).

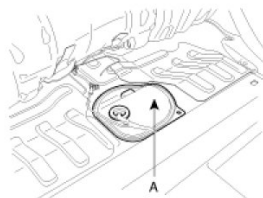


- (3) Disconnect the fuel pump connector (A).

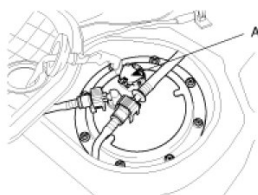


- (4) Start the engine and wait until fuel in fuel line is exhausted.
(5) After engine stalls, turn the ignition switch to OFF position.

2. Disconnect the fuel feed line (A) and canister hoses (B).

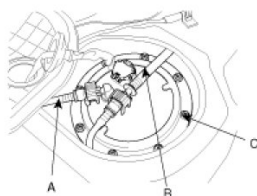

3. Unscrew the fuel pump mounting bolts (C) and remove the fuel pump assembly.

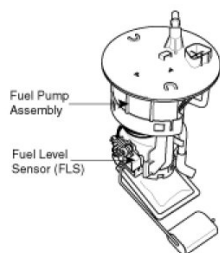

INSTALLATION

Install the Fuel Pump according to the reverse order of REMOVAL procedure.

Tightening Torques Fuel pump installation bolts/nuts: 2.0 - 2.9Nm (0.2 - 0.3kg-m, 1.4 - 2.2lb-ft)