

# Fluid - M/T: Service and Repair


## Transaxle Gear Oil Level Replacement

### SERVICE ADJUSTMENT PROCEDURE

#### TRANSAXLE GEAR OIL LEVEL

#### REPLACEMENT

1. With the vehicle parked on a level surface, remove the drain plug.
2. Drain the transaxle oil after loosening the drain plug(A).

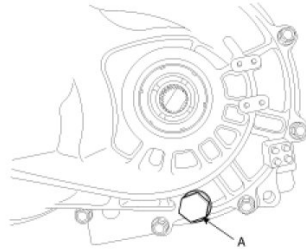

3. Install the drain plug with new washer.

**Drain plug tightening torque: 60-80 Nm (600-800 kg-cm, 43-58 lb-ft)**

4. Add new oil through the filler plug hole and, fill it just below the plug opening.

**Standard oil SAE 75W/85, API GL-4 Oil capacity: 1.9 liter (2.0 US qt, 1.67 Imp qt)**